# COMEUP

# Baby Winch Model: CWS-230

PN:421517 220V 421820 230V 421387 100V 421393 110V

### **Introduction**

Feature	
Lifting capacity:	230 kg wire rope top layer
Lifting height:	24 m
Lifting speed:	9 – 14 m/min
Brake:	Electromagnetic and mechanical ratchet
Limit protection:	Lifting and lowering limiters
Control:	Pendant switch powers the winch

#### ► Unpacking

Winch assembly	1pc
• Wire rope 5 mm x 25 m	1pc
Weight hook CHW-0033	1pc
<ul> <li>Power lead 1.5 mm<sup>2</sup> x 3C x 5 m and plug</li> </ul>	1pc
• Power lead 2.0 mm <sup>2</sup> x 3C x 5 m and plug for PN:421396	1pc
<ul> <li>Pendant switch CPB-313 w/cord 1.25 mm<sup>2</sup> x 6C x 10 m</li> </ul>	1pc

#### Read this manual carefully

You should carefully read and understand this manual before operating it. Careless winch operation may result in personal injury hazards or property damage.

#### Information requesting or parts ordering

Please specify the followings information:


- $\cdot \text{ Winch PN}$
- · Serial number
- · Part description
- · Replacement part number
- $\cdot$  Quantity for each part

### **Installation**


Before using the winch, make sure all electrical components have no corrosion or damaged; the environment should be clear and dry.

### ► Wire rope replacement

- Put a new wire rope through the hole of the round plate of swivel hook.
- · Insert a sleeve pin through the thimble of wire rope.
- Insert a pin through the sleeve pin and bent it by a pliers.
- Let a new wire rope w/clamp through the limit lever and insert it into the hole of the drum.
- Put a P.T. screw into the hole of the drum and tighten it by a hexagon wrench.
- Press the ↑button to rotate the drum in the lifting direction.
- An uneven winding of wire rope may cause the load to be swing, thus damaging the rope and reducing its life.

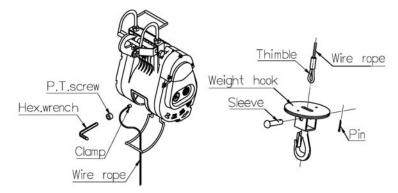

### Wiring Diagram

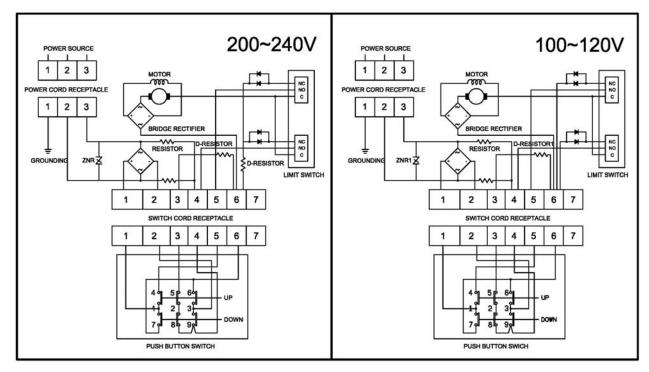

## <u>Warning</u>

- The winch is not intended to be used in any manner for the movement or lifting of personnel.
- The lifting capacity shown is based on the top layer of rope on the drum.
- The rope winding on the drum shall remain 5 wraps from the drum.

### Parts List

Item No.	Description	Part No.	Qty	
1	Gearbox rear cover kit	880493	1	
2	Ratchet stopper kit	880547	1	
3	Brake kit	881507	1	
4	1 <sup>st</sup> gear kit	881498	1	
5	3 <sup>rd</sup> gear kit	881508	1	
6	4 <sup>th</sup> gear kit	880500	1	
7	Gear box kit	880470	1	
8	Hanger kit	880476	1	
9	Carbon brush holder 880472		1	
10	Carbon brush 100V~240V	880473	2	
11	Over-winding bracket kit	880503	1	
12	Wire rope	880960	1	
13	Weight hook CHW-0033	880505	1	
14	Armature core 100/110V	880972	1	
14	Armature core 220/230V	880973		
15	Cooling cover	881500	1	
16	Armature winding 100/110V	880512	1	
10	Armature winding 220/230V	880513		
17	Motor rear cover	880477	1	
18	Reverse winding shaft kit	880478	1	
19	Output shaft kit	880507	1	
20	Drum kit	881501	1	
21	Control panel 110V	880510	1	
21	Control panel 220~240V	881255		
21-1	D type resistor 100/110V	881509	1	
21-1	D type resistor 220~240V	881502	2	
21-2	Limit switch	881503	2	
21-3	Diode	881504	2	
22	Rubber packing	880483	1	
23	Electric cover kit	880511	1	
24	Power lead w/3 round pins plug	880492	- 1	
24	Power lead w/2 flat pins plug	880490		
25	25 Remote control , CPB-313		1	

### Winch Assembly

